


# WORLD E MIDI键盘控制器号设置教程

**MIDI键盘型号EASYPAD**      **面板控制**      **初始控制器号**

The screenshot displays the 'Editor' window of the MIDI controller software. At the top, there are three yellow tabs: 'MIDI键盘型号EASYPAD', '面板控制', and '初始控制器号'. The main interface features a menu bar with 'File', 'Edit', 'Communication', and 'Help'. Below the menu bar are four scene buttons: 'SCENE 1', 'SCENE 2', 'SCENE 3', and 'SCENE 4'. The central area shows a virtual keyboard with various controls. On the left, there are buttons for 'CC 49', 'CC 47', 'CC 48', 'CC 44', 'CC 46', and 'CC 45'. A vertical slider is labeled 'X' and 'Y'. The keyboard has two rows of notes: the top row includes 'Note D#2', 'Note C3', 'Note A2', 'Note G2', 'Note D#3', and 'Note C#3'; the bottom row includes 'Note C2', 'Note D2', 'Note E2', 'Note F#2', 'Note G#2', and 'Note A#2'. Below the keyboard, there are buttons for 'Note C#-1' and 'Note D-1'. A 'CONTROL' panel is visible on the left, listing functions such as 'Transport-STOP', 'Transport-PLAY', 'Mod Trigger - 1', 'Mod Trigger - 2', and 'Trigger Pad - 1' through '6'. On the right, a 'CC/Note Num' dropdown menu is set to 'F#2'. Below this, the 'Assign Type' is set to 'Note'. The 'CC/Note' field is set to 'F#2', 'Pad Behavior' is set to 'Momentary', 'MIDI Channel' is set to 'Global', 'On Value' is set to '127', and 'Off Value' is set to '0'.

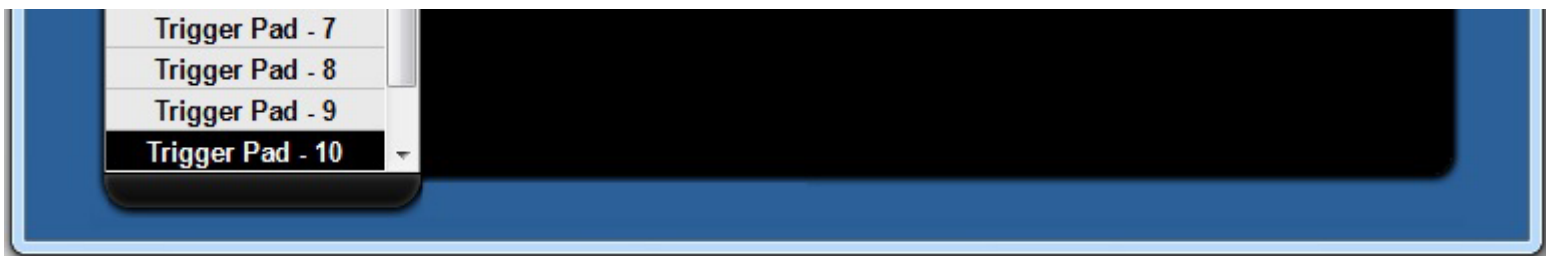

## **WORLDE MIDI键盘控制器号设置说明**

**1)** WORLDE MIDI键盘支持所有通用MIDI格式的应用软件，如您在初次使用WORLDE MIDI键盘时遇到因控制器号不匹配而无法成功连接应用软件的问题，请参考本说明对应用软件的控制器号进行设置。如：WORLDE KS49A的SLIDER推杆的初始控制器号为147，若您欲将此SLIDER推杆和应用软件上的某个SLIDER推杆成功匹配，您需要先将应用软件上这个SLIDER推杆的控制器号设置为147。

**2)** 由于MIDI协议规定的控制器号范围为0到127，如需使初始控制器号超过127的面板控制与应用软件成功匹配，您需要先将此面板控制的控制器号更改为0到127之间的控制器号，然后使用和上述1同样的方式使此面板控制成功匹配应用软件。如：WORLDE KS49A的SLIDER推杆的初始控制器号为147，您需要先将此SLIDER推杆的控制器号更改为0到127之间的控制器号，然后再将应用软件上相对应的SLIDER推杆的控制器号更改为与此相同的控制器号即可。